



# CENTERLINE<sup>®</sup> Motor Control Centers Replacing Line Terminal Guards

For 30A, 60A, 100A and 200A I/C Disconnects  
100, 200 and 400A PCP Disconnect  
(Not for Cutler-Hammer/Westinghouse Disconnect or Bulletin  
1494V, 400A Disconnect)

Catalog Numbers: 2100H-NLT26, 2100H-NLT27, 2100H-NLT28,  
2100H-NLT29

## Instructions

### Application

This instruction sheet is to be used for replacing the line terminal guards used in Bulletin 2100 and 2400 fusible disconnect units.



**ATTENTION:** De-energize all power sources before attempting to replace the line terminal guard. Failure to de-energize all power sources can result in severe injury or death.

---

### Instructions

1. The line terminal guards are held in place by a rubber handle that fits into two (2) holes in the disconnect. To remove, pull rubber handle forward. Discard old line terminal guard.
2. Grasp new line terminal guard by the rubber handle. Firmly push two round ends into corresponding holes in disconnect until guard is firmly in place.

