

MiniCAS II, 24 VAC/DC, 120 VAC and 230 VAC Supervision relay

TECHNICAL DATA

 **Technical data**

Xylem Flygt MiniCAS II is a supervision relay for temperature and leakage sensors. It is designed for the 3000 series pumps up to model 3301 and for the mixer program.

A number of condition monitoring sensors are available for the Xylem FLYGT pump range.

- **Thermal switches** for stator overtemperature.
- **CLS** for water in oil detection.
- **FLS** for detection of liquid in the stator housing.
- **FLS10** for detection of liquid in the inspection chamber in the new midrange pump series, eg 3153, 3171, 3202 and 3301.

The sensors can be used in any desired combination.

For "Ex" certified pumps only combinations involving thermal switches, FLS and FLS10 may be used.

On the front, there are three indication lamps, one for supply, one for temperature alarm and one for leakage alarm. For the communication between the pump and the MiniCAS II, only two wires are needed. The MiniCAS II is designed to be connected to a standard 11-pin socket.

MiniCAS II is interchangeable with the original version of MiniCAS.

Operational principle:	Current Sensing
Approvals:	CE, C-UR (covering USA and Canada) and CSA
Environment:	-25 to +60°C. maximum 90% relative humidity
Supply voltage 24 VAC/DC:	24 VAC, -17% –+25% (50-60Hz) 24 VDC, -2% –+25%
Supply voltage 120 VAC:	120 VAC, -15% –+15% (50-60 Hz)
Supply voltage 230 VAC:	230 VAC, -15% –+15% (50-60 Hz)
Relay contact rating:	250 VAC / 5A
Voltage to sensor:	12 V DC +/-5%
Values of operation:	3 mA < I < 22 mA = OK condition I < 3 mA = High Temperature (or interruption) I > 22 mA = Leakage (or short circuit), delay 10 sec. (I = current measured by MiniCAS II)
Power supply required:	5 VA

OPERATION

Leakage:	Changeover contacts	11-8 Normally closed for Interlock 11-9 Normally open, closes for Alarm
	Automatic reset	
	Red LED for indication - follows the relay	
	Red indication lamp on:	Leakage


	Red indication lamp off:	No leakage
Temperature:	Changeover contacts	1-3 Normally open, closes for Interlock 1-4 Normally closed for Alarm
	Manual reset (see below)	
	Red Indication lamp on:	Overtemperature
	Red Indication lamp off:	Normal temperature
Reset of temperature alarm:	External reset is possible either by connecting terminals 6 - 7 with an external push button or by interrupting the supply voltage. Note, in the 24 V version, Reset is also possible between 6-2.	
Supply:	Yellow indication lamp on:	Supply on
	Yellow indication lamp off:	Supply off
DIMENSIONS (WxHxD)	33 mm x 79 mm x 75 mm	
PART NOS:	83 58 57 (24 VAC/DC) 40 501098 (120 VAC) 40 501560 (230 VAC)	



CONNECTIONS

Leakage alarm will stop the pump

This installation can be used if the leakage alarm shall stop the pump. It is recommended if the FLS sensor is used. The FLS is detecting liquid in the stator housing, which is critical and requires a quick stop of the pump.

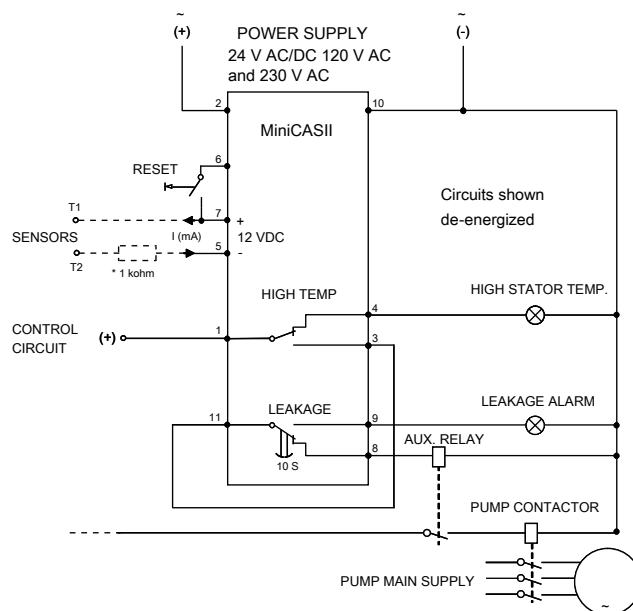

*) Fit resistor to avoid short circuit if only thermal contacts are

Figure 1

Note, in the 24 V version RESET is also possible between 6-2.

Leakage alarm will not stop the pump (only warning)